



# EAGLE RENTAL™

Stevens: 1327 N. Reading Road, 17578 - (717) 336-0777  
Lebanon: 2530 Quentin Road, 17042 - (717) 274-3945  
www.eaglerentalcenter.com

## COFFEE MAKER

### INSTRUCTIONS

- Remove cover and basket assembly. Fill with fresh, **cold** tap water to desired fill line, located on inside of coffee maker. **DO NOT FILL BEYOND TOP FILL LINE!**
- Never pour hot water in coffee maker to make coffee
- Measure ground coffee into basket according to chart. Place basket assembly into coffee maker heating well. **DO NOT FORCE TUBE INTO PLACE!**
- Place cover over unit. Specially designed cover distributes water over ground coffee.
- Allow approximately 1 minute per cup of coffee when brewing less than 55 cups. Allow 45-50 seconds per cup for 55 cups or more.

#### Finished Brew (5oz servings)

12  
16  
20  
30  
40  
48  
55  
60  
72  
84  
100

#### Ground Coffee (Level Cups)

$\frac{3}{4}$   
1  
1  $\frac{1}{4}$   
2  
2  $\frac{1}{2}$   
3  
3  $\frac{1}{4}$   
3  $\frac{3}{4}$   
4  $\frac{1}{2}$   
5  $\frac{3}{4}$   
6  $\frac{1}{4}$

### GENERAL

- Unit is designed to use either 110-120 volt or 220-240 volt outlets. To be sure which one you have, check the voltage stamped on the base of unit. Do not use in an outlet not compatible with your unit- it could overheat. Do not use with Direct Current.
- Plug cord into AC outlet.
- Voltage changes or variations in water temperature will affect brewing time.
- On 100 cup coffee maker, turn on/off switch to on position to start brewing. 55 cup coffeemaker begins brewing as soon as it's plugged in.
- Signal light on 100 cup model glows when coffee is ready. After brewing is complete, unit automatically reduces heat and maintains coffee at serving temperature until unplugged or the on/off switch is turned to 'Off'.
- NEVER plug in coffee maker without water or liquid coffee in it. This will damage the coffeemaker.

### HELPFUL HINTS

Remove coffee basket and grounds as soon as the brewing cycle is complete. This also helps maintain flavor. Before brewing a second pot, cool coffee maker by rinsing it thoroughly with cold water. Use coffee maker cover as a drip catcher when removing basket and discarding wet coffee grounds. To reheat cold coffee, remove basket and percolating tube before plugging unit in. If faucet drips, check faucet bonnet to be sure it's firmly tightened.