



EAGLE RENTALTM

Stevens: 1327 N. Reading Road, 17578 - (717) 336-0777

Lebanon: 2530 Quentin Road, 17042 - (717) 274-3945

www.eaglerentalcenter.com

ROASTER OVEN



Operating Instructions:

1. Turn temperature control dial to "OFF" and plug cord into wall outlet.
2. Always leave insert pan in place it keeps oils and grease from getting into the roaster oven itself.
3. Preheat oven by turning the dial to designated setting and the red light will come on. When it is preheated the light will go out. This step is only needed if recipe calls for preheating.
4. If no preheating is required you still may need to add a few extra minutes on to cooking.
5. Place food to be cooked on metal rack in oven proof glass or foil. Then lower the rack into the roaster oven.
6. When cooking is finished turn temperature control dial to "OFF" before unplugging cord.

Hint for Best Results:

-Do not operate other appliances on the same electric circuit while roaster oven is in use.

Cleaning & Care:

1. ALWAYS disconnect electrical cord from wall before cleaning.
2. ALWAYS clean roaster thoroughly with hot soapy water after every use, or cleaning charge will apply.
3. NEVER immerse roaster over in water, only rack and pan can be immersed in water.